SFH756 / SFH756V

Plastic Fiber Optic Transmitter Diode Plastic Connector Housing

AVAGO

Data Sheet



Description

The SFH756 is a low-cost transmitter for simple optical data transmission with polymer optical fiber. The 650nm LED allows for speeds up to 10MBd.

The transparent plastic package has an aperture where the the 2.2mm fiber-end can be inserted and fixed with glue. This easy coupling method is extremely costeffective.

The V-housing allows easy coupling of unconnectorized 2.2mm plastic optical fiber by means of an axial locking screw.

Ordering Information

Туре	Ordering Code			
SFH756	SP000063802			
SFH756V	SP000063814			

Features

- 2.2 mm Aperture holds Standard 1000 Micron Plastic Fiber
- No Fiber Stripping Required
- Good Linearity (Forward current > 2 mA)
- Molded Microlens for Efficient Coupling

Plastic Connector Housing

- Mounting Screw Attached to the Connector
- Interference Free Transmission from light-Tight Housing
- Transmitter and Receiver can be flexibly positioned
- No Cross Talk
- Auto insertable and Wave solderable
- Supplied in Tubes

Applications

- Household Electronics
- Power Electronics
- Optical Networks
- Light Barriers

Technical Data

Absolute Maximum Ratings

Symbol T _{OP}	min.	max.	Unit
T _{OP}	10		Unit
	-40	+85	°C
T _{STG}	-40	+100	°C
Tj		100	°C
TS		260	°C
VR		3	V
I _F		50	mA
I _{FSM}		1	Α
P _{TOT}	BD.	120	mW
R _{thJA}		450	K/W
	TJ TS VR IF IFSM	TJ TS VR IF IFSM PTOT	TJ 100 TS 260 VR 3 I _F 50 I _{FSM} 1 PTOT 120

Characteristics ($T_A = 25^{\circ}C$)

Parameter	Symbol	Value	Unit	
Peak Wavelength	λ _{Peak}	660	nm	7
Spectral Bandwidth	Δ_{λ}	- 25	nm	
Switching Times (R _G = 50 Ω , I _{F(LOW)} = 0.1mA, I _{F(HIGH)} = 50 mA) 10% to 90% 90% to 10%	t _R	0.1 0.1	μs	
Capacitance (f = 1 MHz, $V_R = 0 V$)	$C_0 \setminus A$	30	pF	
Forward Voltage ($I_F = 50 \text{ mA}$)	VF	2.1 (≤ 2.8)	V	
Output Power Coupled Into Plastic Fiber (I _F = 10 mA) [1]	Φ_{IN}	200 (≥ 100)	μW	
Temperature Coefficient $\Phi_{ extsf{IN}}$	$T_C\Phi$	-0.4	%/K	
Temperature Coefficient V _F	T _{CV}	-3	mV/K	
Temperature Coefficient λ _{Peak}	TCλ	0.16	nm/K	

Notes

BRAWIJAYA

^{1.} The output power coupled into plastic fiber is measured with a large area detector after a short fiber (about 30 cm). This value must not used for calculating the power budget for a fiber optic system with a long fiber because the numerical aperture of plastics fibers is decreasing on the first meters. Therefore the fiber seems to have compared with the specified value a higher attenuation on the first meters.

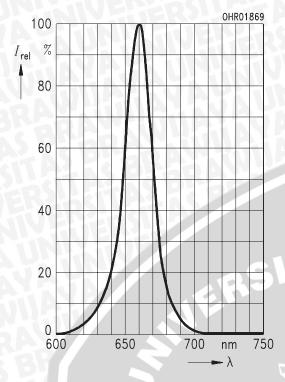


Figure 1. Relative Spectral Emission $I_{rel} = f(\lambda)$

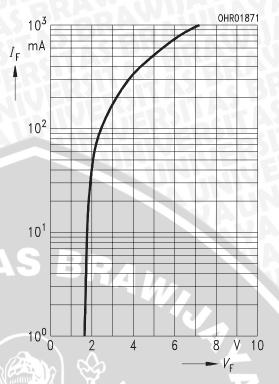


Figure 2. Forward Current $I_F = f(V_F)$ single pulse, duration = 20 μ s

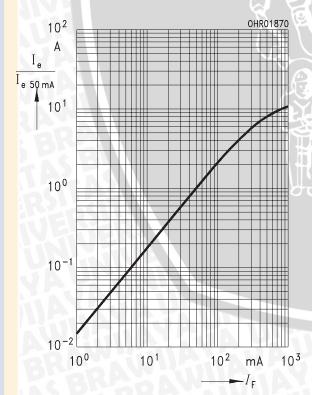


Figure 3. Relative Output Power, $l_e/l_{e(50 \text{ mA})} = f(l_F)$ single pulse, duration = 20 μ s

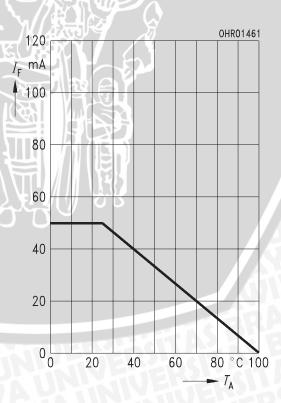


Figure 4. Maximum Permissible Forward Current, $I_F = f(T_A)$, $R_{thJA} = 450 \text{ K/W}$

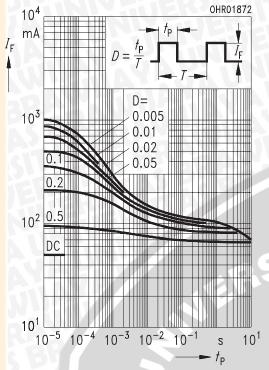


Figure 5. Permissible Pulse Handling Capability, $I_F = f(t_P)$, duty cycle D = parameter, $T_A = 25^{\circ}C$

Package Outlines



Disclaimer

The information herein is given to describe certain components and shall not be considered as a guarantee of characteristics.

Terms of delivery and rights to technical change reserved. We hereby disclaim any and all warranties, including but not limited to warranties of non-infringement, regarding circuits, descriptions and charts stated herein.

Warnings

Due to technical requirements components may contain dangerous substances. For information on the types inquestion please contact your nearest Avago Technologies Office.

Avago Technologies Components may only be used in life-support devices or systems with the express written approval of Avago Technologies, if a failure of such components can reasonably be expected to cause the failure of that life-support device or system, or to affect the safety or effectiveness of that device or system. Life support devices or systems are intended to be implanted in the human body, or to support and/or maintain and sustainand/or protect human life. If they fail, it is reasonable to assume that the health of the user or other persons maybe endangered.

Information

For further information on technology, delivery terms and conditions and prices please contact your nearest Avago Technologies Office (www.avagotech.com).



For product information and a complete list of distributors, please go to our web site: www.avagotech.com

